


SCREEN HINGE DOOR CLOSER FITTING INSTRUCTIONS

KIT INCLUDES:

- (a) Door Closer
- (b) Door Bracket
- (c) Short Screws (qty 2)
- (d) Hold Open Washer
- (e) Jamb Bracket
- (f) Long Screws (qty 3)

NOTES:

- Ensure Door closes freely before installation
- Max Door Weight 25kg

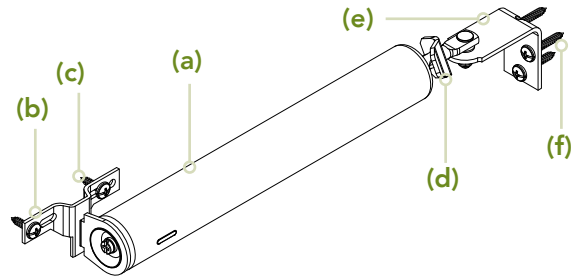


STEP 1

Place the Jamb Bracket on the hinge side of the door jamb.

Position bracket 40mm below the top of the frame head (a) and 15 to 25mm away from the screen door face (b).


Mark and drill the 3 fixing holes and screw the jamb bracket in place using the longer length screws

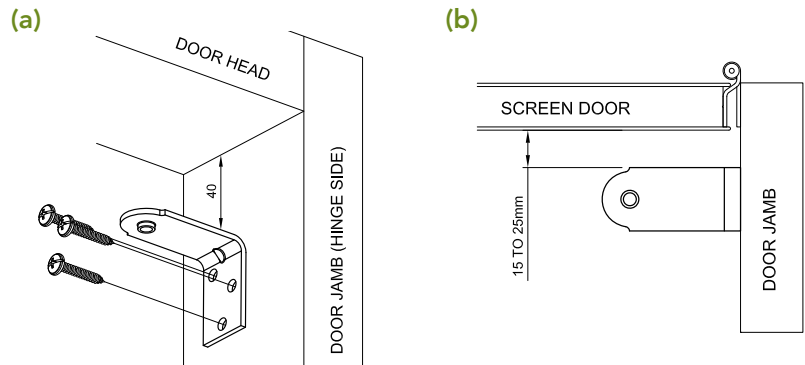

STEP 2

Extend the rod out far enough to be able to move the Hold Open Washer past the flanges on the rod (b)

Slowly release the rod until the Hold Open Washer is hard up against the cylinder on one end and the flanges on the other (c)

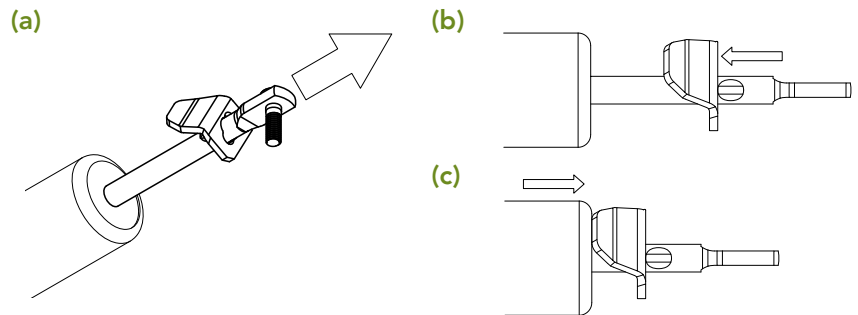


STEP 3

With the screen door closed and the lock fully latched and engaged, place the Door Bracket level on the door (a).

Mark the centre of the first elongated screw hole, unclip the closer from the Door Bracket and drill a 3mm hole. Fix the Door Bracket with the shorter length screw (b)

Refit the closer onto the Door Bracket and disengage the Hold Open Washer (c)

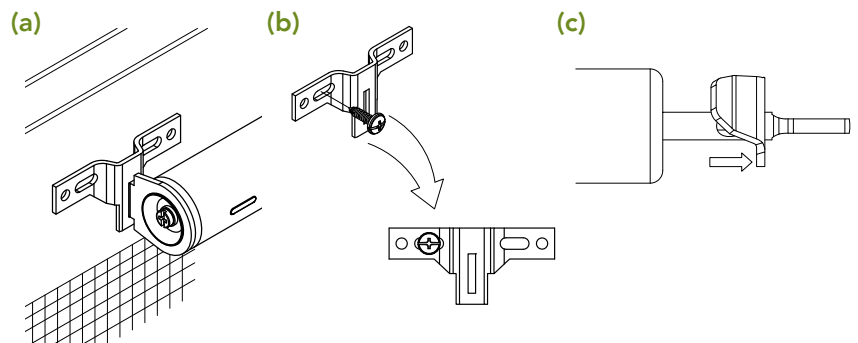

STEP 4

Open the screen door and try the closer. Adjust the closer speed if required (a)

Make any required left and right adjustments for the Door Bracket. Once happy with the position, remove the closer, mark and drill the hole closest to the hinge side and fix a short length screw to hold the bracket in place (b)

Refit the closer to the Door Bracket

Insert the lock nut and washer and fix the cylinder onto the frame bracket. DO NOT OVERTIGHTEN

